



motorola

Digital Cordless Telephone
with Digital Answering
Machine

IDEAL FOR OUTSIDE USE



Motorola O2

Models: O211, O212, O213 and O214



Warning: Charge the handset for 24 hours before use.

Welcome...

to your new Motorola O2 Digital Cordless Telephone with digital answering machine!

- Ultra long cordless 360° range, up to 1km.¹
- Rugged design and sturdy composition makes your Motorola O2 phone ideal for outdoor use.
- Dust and water resistant. Submersible in up to 1 meter of water for up to 30 minutes. Perfect for very wet environments (IP67 rated).
- Belt clip or lanyard options for flexibility when carrying around.
- Wall mountable location free base and handset charger.
- Zoom font when dialling for improved legibility.
- Inductive charging.
- Register up to 11 handsets to a single base and register each handset with up to 4 different bases.
- Answering machine with up to 25 minutes digital recording time.
- All handsets are fully cordless for locating anywhere within range of.
- 200 Name and number phonebook.
- Copy phonebook entries between handsets.
- Caller ID shows you who's calling and see details of the last 50 callers in a Calls Lists.²
- Make internal calls, transfer external calls, hold a 3-way conversation between two internal callers and an external caller.

Need help?

If you have any problems setting up or using your O2, please contact Customer Services on 0860 224 357. Alternatively, you may find the answer in the 'Help' section at the back of this guide.

¹When using the long antenna and when there is a clear line of sight between the base and handset. Any obstruction between the base and handset will reduce the range significantly.

²You must subscribe to your network provider's Caller ID service for this feature to work. A subscription fee may be payable.

Please note that this equipment is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.

This User Guide provides you with all the information you need to get the most from your phone.

Before you make your first call you will need to set up your phone. Follow the simple instructions in 'Getting Started', on the next few pages.

IMPORTANT

Only use the telephone line cord supplied.

Got everything?

- O2 handset with standard antenna
- O2 base
- O2 charger
- Power adaptor for the base
- Power adaptor for the charger
- 1 x Belt clip (pre installed)
- Telephone line cord
- 750mAh Ni-MH battery pack (pre installed)
- Long range antenna
- Screws and plugs for wall mounting

If you have purchased an O2 multiple pack you will also have the following additional items:

- O2 handset with standard antenna
- O2 charger
- Power adaptor for the charger
- 1 x Belt clip (pre installed)
- 750mAh Ni-MH battery pack (pre installed)
- Long range antenna
- Screws and plugs for wall mounting



ECOMOTO: a convergence of efforts by marketing, design, research, engineering and supply chain management that leads to better products for everyone. A holistic view that focuses on both social and environmental responsibility. A passion and a shared point of view.

The right thing to do.

- Meets and / or exceeds EMEA environmental regulatory requirements.
- Eco friendly packaging with a minimum 20% post consumer recycled content.
- Phone housing is built with a minimum of 15% post consumer recycled content plastic.
- Energy efficient charger that meets EU Code of Conduct requirements.
- ECO mode function which reduces the transmitted power and energy consumption, please refer to page 37.

1.	Getting started	7
2.	Getting to know your phone	11
3.	Using the phone	16
3.1	Switch the handset on / off.....	16
3.2	To make a call	16
3.3	To make a call by pre-dialling.....	16
3.4	To make a call using fast call keys	16
3.5	To make a hands-free call.....	16
3.6	Call from the phonebook	16
3.7	Call from the Calls Lists	16
3.8	To answer a call	17
3.9	To answer a call in hands-free	17
3.10	To adjust the volume	17
3.11	Secrecy	17
3.12	To end a call	17
3.13	Intercom.....	18
3.13.1	Make an internal call	18
3.13.2	Receive an internal call	18
3.13.3	Transfer a call.....	18
3.13.4	3-way conference call	18
3.14	To lock the keypad	19
4.	Phonebook	20
4.1	To dial phonebook entries.....	20
4.2	To store an entry.....	20
4.3	Entering names.....	20
4.4	Character map.....	21
4.5	To enter a pause	21
4.6	To search an entry.....	22
4.7	To view details of an entry.....	22
4.8	To edit an entry	22
4.9	To copy an entry to another handset.....	22
4.10	To assign a ringtone	23
4.11	To delete an entry	23
4.12	To store a fast call number	23
4.13	To clear a fast call number.....	24
4.14	To access the phonebook during a call.....	24
4.15	To copy the phonebook to another handset.....	24
4.16	To check memory status.....	24
4.17	To delete all entries	24
5.	Calls Lists	25
5.1	New calls alert.....	25
5.2	To view details of the call	25

5.3	To save a number from the Calls Lists to the phonebook.....	26
5.4	To delete a Calls Lists entry	26
5.5	To delete entire Calls Lists.....	26
5.6	To redial the last number	27
5.7	To view and dial a number in the redial list.....	27
5.8	To copy a redial number to the phonebook	27
5.9	To delete a redial list entry	27
6.	Agenda	28
6.1	To add a new event.....	28
6.2	To switch off reminder ring.....	28
6.3	To show event details.....	28
6.4	To edit an event.....	29
6.5	To delete an event.....	29
6.6	To delete all events	29
7.	Clock & Alarm	30
7.1	To set date and time manually	30
7.2	To set alarm	30
7.3	To set time format	30
8.	Handset settings.....	31
8.1	To set the handset ringtone	31
8.2	To set the handset ringer volume	31
8.3	To set the receiver volume.....	31
8.4	To change the handset name	32
8.5	To change the display language.....	32
8.6	To change the wallpaper	32
8.7	To set the screensaver	33
8.8	To set light timeout	33
8.9	To switch auto talk on / off	33
8.10	To switch key beep on / off.....	33
8.11	To set PBX Access Code.....	34
9.	Base settings.....	35
9.1	To set the base ringtone	35
9.2	To set the base ringer volume.....	35
9.3	To set ring priority	35
9.4	To change the recall mode.....	36
9.5	To change the System PIN.....	36
9.6	To reset the phone	37
9.7	To switch ECO on / off	37
9.8	To switch ECO PLUS on / off.....	37
9.9	Default settings.....	38
10.	Registration.....	39

10.1	To register a handset.....	39
10.2	To select a base.....	39
10.3	To de-register a handset.....	40
11.	Answering machine.....	41
11.1	Switch between answering machine on / off.....	41
11.2	To change answer delay.....	41
11.3	To switch message alert tone on / off.....	41
11.4	New messages alert.....	42
11.5	Outgoing messages.....	42
11.6	To record a personalised OGM.....	42
11.7	To play or delete your personalised OGM.....	42
11.8	To set the answer mode OGM.....	43
11.9	To record a memo.....	43
11.10	Call screening.....	43
11.11	Message playback.....	44
11.12	Delete all old messages.....	44
11.13	Remote access.....	45
11.14	To switch remote access on / off.....	46
11.15	To change the remote access PIN.....	46
12.	Help.....	47
13.	General information.....	49
14.	Wall mounting.....	55

1. Getting started

IMPORTANT

Although the O2 handset is water resistant we do not recommend you locate your main base or charger in the bathroom or other humid areas.

Location

You need to place your O2 base within 2 metres of the mains power and telephone wall sockets so that the cables will reach. The socket-outlet should be installed near the equipment and should be easily accessible.

Make sure that it is at least 1 metre away from other electrical appliances to avoid interference. Your O2 works by sending radio signals between the handset and base. The strength of the signal depends on where you place the base. Placing it as high as possible ensures the best signal.

HANDSET RANGE



The unit has two antennae that can be used with the handset:

Standard range antenna:	Outdoor range 600 metres ¹ Indoor range 50 metres ¹
Long range antenna:	Outdoor range 1km ¹ Indoor range 50 metres ¹

¹When there is a clear line of sight between the base and handset. Any obstruction between the base and handset will reduce the range significantly.

To change antenna simply unscrew (anti-clockwise) the standard range antenna on the handset and replace with the long range antenna.

Unscrew the antenna anti-clockwise when the screen is facing you.

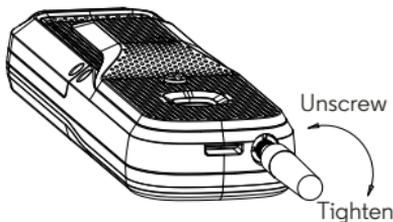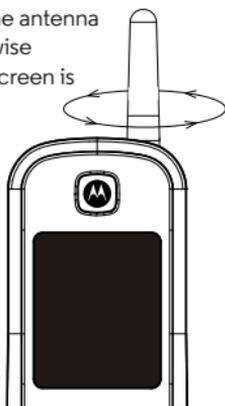

SIGNAL STRENGTH

The  icon on your handset indicates that you are within range of the base. When out of range of the base, the  icon flashes. If you are on a call, you will hear a warning beep.


The line will hang up if the handset moves out of range of the base. Move closer to the base. The handset will automatically reconnect to the base.

Setting up

IMPORTANT


The base station must be plugged into the mains power at all times. Do not connect the telephone line cord into the wall socket until the handset is fully charged. Use only the power adaptor and telephone line cord supplied with the product.

Connecting the base

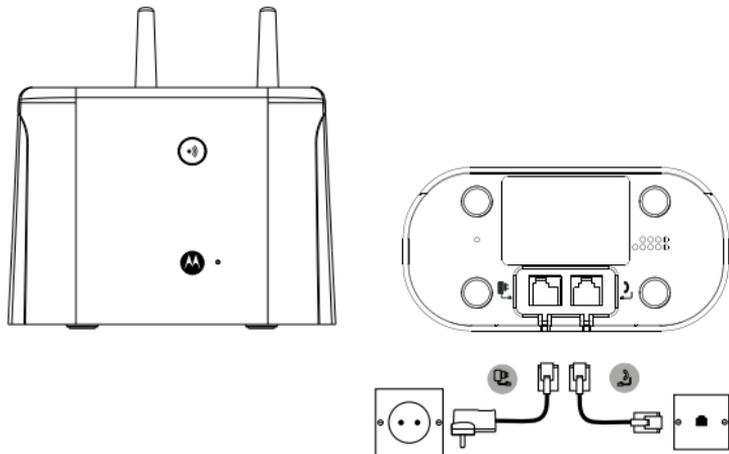

1. Plug the telephone line cord into the socket marked  on the underside of the base.
2. Plug the power adaptor into the socket marked  on the underside of the base and plug the other end into the mains power wall socket. The green Power/In use light comes on and you will hear a confirmation tone.


Installing and charging the handset

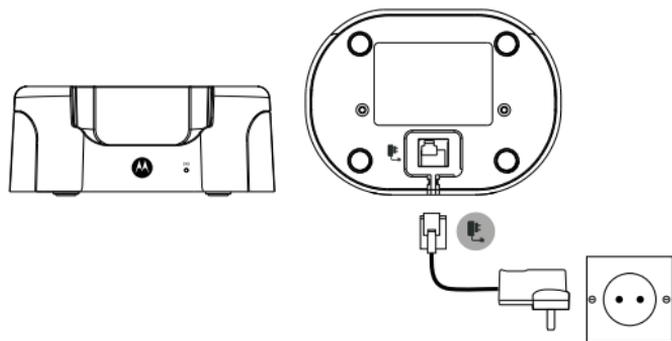

1. Plug the power adaptor into the socket marked  on the underside of the charger and plug the other end into the mains power wall socket.
2. The 750mAh Ni-MH battery pack is pre installed. If you are charging the batteries for the first time, place the handset on the charger to charge for at least 24 hours continuously.
3. When the handset is fully charged,  icon will appear steady on the display. The display will show the time and handset number (e.g. 2) to indicate that it is registered to the base. Plug the other end of the telephone line cord (make sure that one end is already plugged into the base) into the telephone wall socket.

Replacing the handset battery

1. Unscrew the belt clip, then unscrew the 4 screws on the battery cover (the screws will stay attached to the battery compartment door) from the back of the handset and plug in the 750 mAh Ni-MH rechargeable battery pack supplied.

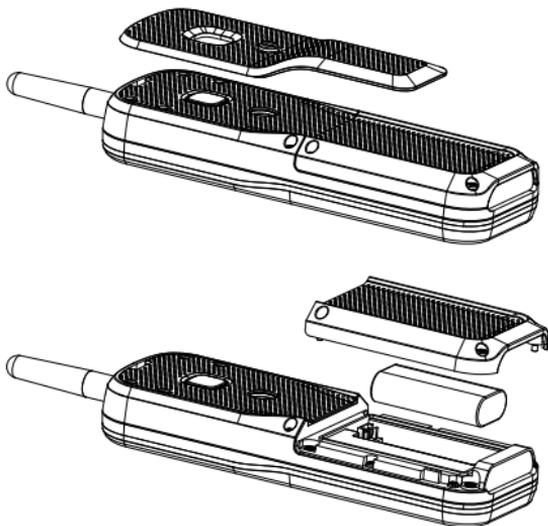

2. Replace the battery cover and screw the cover into place. Finally, screw the belt clip on.

IMPORTANT

Warning! Use only the approved rechargeable Ni-MH battery pack (750mAh Ni-MH rechargeable battery pack) supplied with your O2.

BATTERY LOW

If  icon is displayed and you hear a warning beep every 30 seconds during a call, you will need to recharge the handset before you can use it again. When charging,  icon will scroll on the display.

BATTERY PERFORMANCE

In ideal conditions, fully charged batteries should give up to 12 hours talk time or up to 250 hours standby time on a single charge¹.

Note that new batteries do not reach their full capacity until they have been put to normal use for several days.

To keep your batteries in the best condition, leave the handset off the base for a few hours at a time.

Running the batteries right down at least once a week will help them last as long as possible.

The charge capacity of rechargeable batteries will reduce with time as they wear out, giving the handset less talk/standby time. Eventually they will need to be replaced (see page 9).

After charging your handset for the first time, subsequent charging time is about 6–8 hours a day. Batteries and handset may become warm during charging. This is normal.

¹All talk and standby times are approximate and depend on features selected and usage pattern.


Date and time

1. Press Menu, scroll ▼ to Clock & Alarm and press Select.
2. Date & Time is highlighted. Press Select.
3. Enter the date using the format DD/MM/YY e.g. 04/08/15 for 4 August 2015.
4. Enter the time (HH:MM) and press Save.
If the current time format setting is 12 hour, select am or pm.
5. Press  to return to standby mode.

Your phone is now ready for use.

2. Getting to know your phone

Overview of your handset

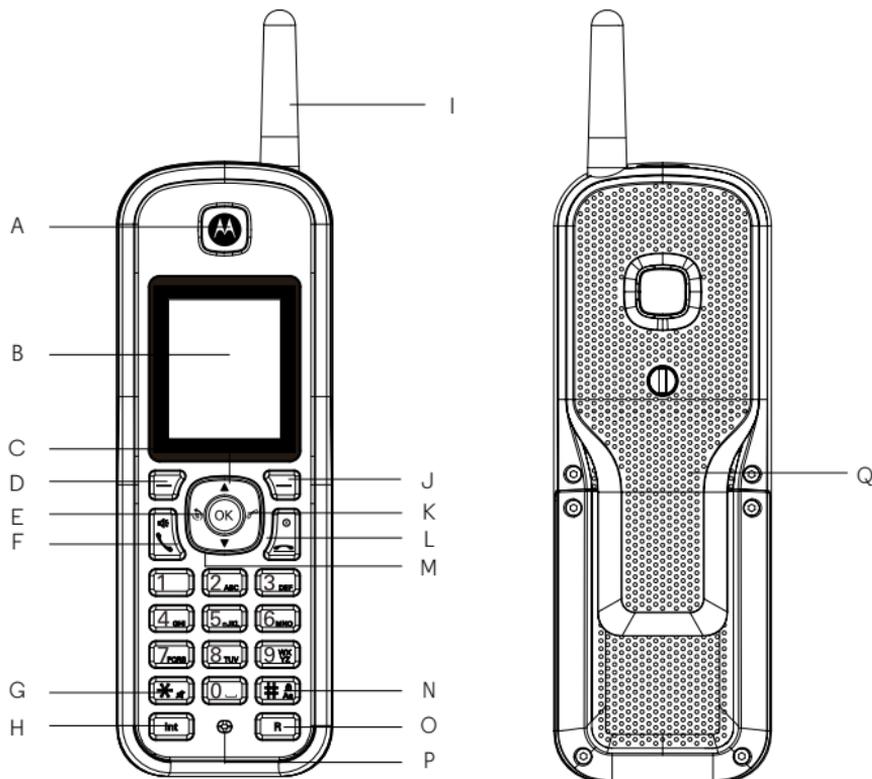

A Earpiece

B Display

See page 13 for an overview of the display icons.

C Scroll up / Volume up

Scroll up through lists and settings.

During a call, press to increase the earpiece and hands-free volume.

When the phone is ringing, press to increase the handset ringer volume.

D Menu / OK / Secrecy

Enter the main menu.

Select the option displayed on screen.

Confirm menu option – OK is displayed on screen.

Turn secrecy on/off during a call.

E Redial list / Pause

In standby mode, press to open the redial list.

Press and hold to enter a pause (P) during pre-dialling.

F Talk / Hands-free

Make or answer a call.

Activate and deactivate hands-free during a call.

G * / Ringer off

Dial a *.

Press and hold to switch handset ringer on or off.

H Intercom

Press to make an internal call.

I Antenna

Can be unscrewed and either a standard or long range antenna can be used. The standard length antenna is shown in the diagram.

J Phonebook menu / Clear / Back

In standby mode, press to open the phonebook menu.

Clear incorrect input during text editing.

Return to previous menu.

K Calls Lists

Open the Calls Lists.

L End / Exit / Switch handset on/off

End a call.

When in a menu, go back to standby mode.

Press and hold to switch handset off (when in standby) or on.

M Phonebook / Scroll Down / Volume down

Open the phonebook.

Scroll down through lists and menus.

During a call, press to decrease the earpiece and hands-free volume.

When the phone is ringing, press to decrease the handset ringer volume.

N Change case / Keypad lock / #

Press to change the case when entering letters / editing.

Press and hold to lock the keypad.

Dial a #.


O Recall

Use recall (R) functions.

P Microphone

Q Belt clip

Handset display

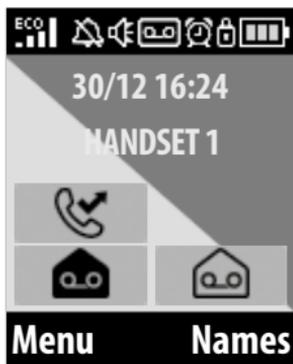

 DECT signal strength

 Displays when ECO mode is on.

 Displays when ECO PLUS is on

 Handset ringer volume is Off.

 Displays when in hands-free mode.

 Displays when the answering machine is on.

 The alarm clock has been set.

 The keypad is locked.

 Displays when you have new answering machine messages.

 Displays when you have new voicemails.¹

 Displays when you have missed calls and new number(s) in the Calls list.²

¹This feature is dependent on your Network Service provider supporting the service. A subscription fee may be payable.

²For this feature to work, you must subscribe to Caller ID Service from your network operator. A subscription fee may be payable.

The approximate power levels of your battery are indicated as follows:


 Battery is fully charged

 Battery is partially charged

 Battery is running low

 Battery is empty

Overview of the base / Charger

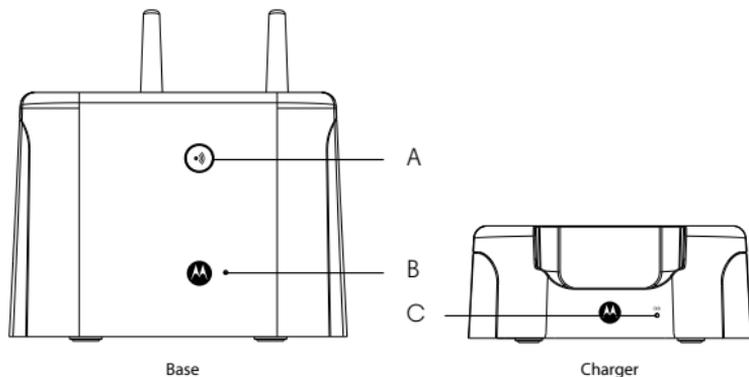

A Paging/Find handset

This function allows you to page for the handset user or locate a missing handset. Paging calls cannot be answered by a handset.

1. Press  on the base. All handsets registered to the base will ring and display Paging Call.
2. To stop the ringing, press  on the base again or press Stop or any button on the handset.

B Power / In-use LED

Lights up when the base is plugged into the power and flashes when the handset is in-use.

C Charging LED

Indicates the handset is on the base / charger correctly and is charging.

Navigating the menus

The basic steps of navigating through the menu and on-screen options.

1. In standby mode, press the left soft key **Menu**. The main menu is opened.
2. Use the **▲** or **▼** keys to scroll through the menu.
3. Soft key options **Select** and **Back** are displayed.
4. Press the left softkey **Select** to open a submenu or validate an option.
5. Press the right softkey **Back** to go back to the previous menu level, correct a character or cancel an action.
6. Press  to return to standby mode.

NOTE

If you do not press any button on the handset for 30 seconds the display will automatically return to standby. It will also return to standby when the handset is placed on the charger.

Menu map

Answer Machine

Play
Play All
Answer On/Off
Record Memo
Outgoing Msg.
Del. Messages
Answer Settings
Language
Answer Mode
Answer Delay
Message Alert
Remote Access

Calls Lists

Missed Calls
Received Calls
Dialled Calls
Delete Calls

Agenda

If there is an event, select Options.

Add Event
Show Details
Edit Event
Delete Event
Del. All Events

If the list is empty:

Add Event

Clock & Alarm

Date & Time
Alarm
Time Format

Settings

Set Handset
Ringtone
Ringer Volume
Receiver Vol.
Handset Name
Language
Wallpaper
Screensaver
Light Timeout
Auto Talk
Key Beep
PBX Access Code
Set Base
Ringtone
Ringer Volume
Ring Priority
Recall Mode
System PIN
Master Reset
ECO Mode

Registration

Register HS
Select Base
De-register

Names

From menu in standby:

Search
Add Entry
Copy Phonebk
Memory Status
Del. Phonebook

Press ▼ in standby and phonebook list is displayed, select Options:

Show Details
Edit Entry
Copy Entry
Ringtone
Delete Entry
Fast Call

Press Names during a call

Phonebook list is displayed, select Options:

Add Entry
Show Details
Edit Entry
Delete Entry

3. Using the phone

3.1 Switch the handset on / off

1. Press and hold  to turn the handset on / off.

3.2 To make a call

1. Press .
2. Dial the telephone number.

3.3 To make a call by pre-dialling

1. Enter the phone number (maximum 32 digits). If you make a mistake, press **Clear**.
2. Press  to dial the phone number entered.

NOTE

If the dialled number matches an entry in the phonebook, the name is displayed.

3.4 To make a call using fast call keys

1. Press and hold the relevant keypad number to dial the pre-stored number directly.

NOTE

To store a fast call number, see page 23.

3.5 To make a hands-free call

1. Press  twice.
2. Dial the telephone number.

NOTE

During a hands-free call, press  or  to adjust the volume.

3.6 Call from the phonebook

1. Press . The first entry in the phonebook is highlighted.
2. Scroll  or  to the entry you want.
Or
To search alphabetically, press the key with the first letter of the name, e.g. if the name begins with N, press  twice. The display shows the first entry beginning with N. If required, scroll  or  to the exact entry.
3. Press  to dial the number.

3.7 Call from the Calls Lists

NOTE

You need to subscribe to your network's Call Display service to be able to see the caller's number in the Calls Lists.

1. Press **Menu**, the display shows **Calls Lists** and press **Select**.
2. Scroll ▲ or ▼ to highlight the calls list (**Missed Calls**, **Received Calls**, **Dialled Calls**, **Delete Calls**) you want.
3. Press **Select**..
4. Scroll ▲ or ▼ to the entry you want.
5. Press  to dial the number.

3.8 To answer a call

When you receive an external call, the phone rings and **External Call** shows on the display.

1. Press  to answer the call.

NOTE

*If the handset is on the charger and you would like to simply lift the handset to answer the call, you will need to switch **Auto Talk** on, see page 33.*

3.9 To answer a call in hands-free

If the handset is off the charger or auto answer is switched off, press  twice to answer the call.

If the handset is on the charger and auto answer is switched on, lift the handset and press .

IMPORTANT

When the phone is ringing, avoid holding the earpiece too close to your ear as it may damage your hearing. Hands-free activation can suddenly increase the volume in the earpiece to a very high level. Make sure the handset is not too close to your ear.

NOTE

To switch back to earpiece mode, press  again during the call.

3.10 To adjust the volume

1. During a call, press ▲ or ▼ to adjust the earpiece or loudspeaker volume.
The level is shown in the handset display.

3.11 Secrecy

Mute the microphone so that you can talk to someone else in the room without your caller hearing you.

1. During a call, press **Secrec.** or **OK**. The display shows **Secrecy On** and your caller cannot hear you.
2. Press **Off** to return to your caller.

3.12 To end a call

1. Press  or replace the handset on the cradle.

NOTE

After you hang up, the duration of your call is displayed for 5 seconds.

3.13 Intercom

3.13.1 Make an internal call

If you have more than one handset registered to the base, you can make internal calls between two handsets.

Internal Call and Handset X displays to indicate an internal call.

1. Press  followed by the number (1-11) of the handset you want to call.
Press and hold 0 to dial handset 10. Press and hold 1 to dial handset 11.
2. Press OK.

3.13.2 Receive an internal call

When you receive an internal call, Internal Call and Handset X is displayed.

1. Press  to answer the call.

3.13.3 Transfer a call

You can transfer an external call to another handset registered to the base.

During an external call:

1. Press  followed by the handset number (1-11) that you want to transfer the call to.
Press and hold  to dial handset 10. Press and hold  to dial handset 11.
2. Press OK.
3. When the other handset answers, press  to complete the transfer.

NOTES

If there is no answer from the other handset and you wish to return to your external caller, press End.

Your external call resumes automatically after 100 seconds if there is no answer.

3.13.4 3-way conference call

You can hold a 3-way conference call between 2 internal callers and 1 external caller.

During a call with an external caller:

1. Press  followed by the handset number (1-11) that you want to establish a conference call.
Press and hold  to dial handset 10. Press and hold  to dial handset 11.
2. Press OK.
3. When the other handset answers, press Join to connect all three callers and begin the conference call.
4. If there is no answer from the other handset, press End to return to your external caller.
5. Press  to end the call.

3.14 To lock the keypad

You can lock the keypad to prevent accidental dialling while carrying it around.

1. Press and hold . The  icon is displayed.
2. To unlock the keypad, press **Unlock**. The display shows **Press # to Unlock Keys**.
3. Press .

NOTE

While the keypad is locked, you can answer incoming calls as normal.

4. Phonebook

The handset phonebook can store up to 200 names and numbers.

NOTE

Numbers can be up to 24 digits long and names up to 16 characters long. Entries are stored in alphabetical order.

4.1 To dial phonebook entries

1. In standby mode, press **▼**. The first entry is highlighted on the display.
2. Scroll **▲** or **▼** to the entry you want.
Or
To search alphabetically, press the key with the first letter of the name, e.g. if the name begins with N, press **6** twice. The display shows the first entry beginning with N. If required, scroll **▲** or **▼** to the exact entry.
3. Press **☎** to dial the entry displayed.

4.2 To store an entry

1. Press Names to enter the phonebook menu.
2. Scroll **▼** to Add Entry and press Select.
3. Enter a name and press OK.
4. Enter a number and press Save.
5. Scroll **▲** or **▼** to the ringtone you want and press Select. The entry is stored.
6. To Handset is displayed and the handset will automatically give you the option to transfer the number to another handset.
7. Press Yes and if there are two or more handsets registered to the base the number will automatically transfer to the other handsets one by one. Once the entry is copied the transferring handset will display Copied Handset: and the handset numbers the entry was copied to.
8. Press **☎** to return to standby mode.

NOTE

Cancel storing an entry by pressing **☎** at any time during the process.

4.3 Entering names

Use the alphanumeric keypad to enter names in the phonebook.

For instance to enter the name Paul

- P Press **7** once
A Press **2** once
U Press **8** twice
L Press **5** three times

To enter a space, press **0**.

Press **▲** or **▼** to move between characters/digits.

Press **Clear** to delete a character, or press and hold **Clear** to delete all characters.

4.4 Character map

Key	Case	Assigned characters and symbols
1	L / U	.,-?!;ç'@::/1
2	L	a b c 2 ä æ å à ç
	U	A B C 2 Ä Æ Å Ç
3	L	d e f 3 è é
	U	D E F 3 É
4	L	g h i 4 i
	U	G H I 4
5	L	j k l 5
	U	J K L 5
6	L	m n o 6 ö ø ò ñ
	U	M N O 6 Ö Ø Ñ
7	L	p q r s 7 ß
	U	P Q R S 7
8	L	t u v 8 ù ü
	U	T U V 8 Ü
9	L	w x y z 9
	U	W X Y Z 9
0	L / U	Space 0
#	L / U	Short press to switch between Abc, abc, ABC and 123 mode

*L = Lower

U = Upper

4.5 To enter a pause

If the phone is connected to a switchboard, you may need to enter a pause in a stored number. This gives the switchboard time to find an outside line. A pause is normally stored after the switchboard PBX Access Code (e.g. 9). When storing a number, press and hold **Ⓟ** until the display shows P. You can then continue storing the phone number.

4.6 To search an entry

1. Press Names to enter the phonebook menu.
2. Search is highlighted. Press Select. The first entry is highlighted on the display.
3. Enter the first letter of the name to search alphabetically then scroll ▲ or ▼ to the exact entry.
4. Press  to dial the entry or  to return to standby mode.

4.7 To view details of an entry

1. In standby mode, press ▼. The first entry is highlighted on the display.
2. Enter the first letter of the name to search alphabetically then scroll ▲ or ▼ to the exact entry. Press Options.
3. Show Details is highlighted. Press Select. The name, number and ringtone of the entry are displayed.
4. Press  to return to standby mode.

4.8 To edit an entry

1. In standby mode, press ▼. The first entry is highlighted on the display.
2. Enter the first letter of the name to search alphabetically then scroll ▲ or ▼ to the exact entry. Press Options.
3. Scroll ▼ to Edit Entry and press Select.
4. Edit the name and press OK to confirm. Press Clear to delete a character, or press and hold Clear to delete all characters.
5. Edit the number and press Save. Press Clear to delete a character, or press and hold Clear to delete all characters.
6. Scroll ▲ or ▼ to the ringtone you want and press Select. The entry is stored.
7. To Handset is displayed and the handset will automatically give you the option to transfer the number to another handset.
8. Press Yes and if there are two or more handsets registered to the base the number will automatically transfer to the other handsets one by one. When the entry is being copied the transferring handset will display Copied Handset: and the handset numbers the entry was copied to.
9. Press  to return to standby mode.

4.9 To copy an entry to another handset

1. In standby mode, press ▼. The first entry is highlighted on the display.
2. Enter the first letter of the name to search alphabetically then scroll ▲ or ▼ to the exact entry. Press Options.
3. Scroll ▼ to Copy Entry and press Select.

4. The display shows To Handset, press Select.
5. Scroll ▲ or ▼ to the number of the handset you want the entry to be copied to. Press Select.
6. Copy is completed when the message “<Name> copied” appears on the display.
7. Press  to return to standby mode.

NOTE

If an entry with the same number is already stored in the receiving handset, it will not be copied.

4.10 To assign a ringtone

1. In standby mode, press ▼. The first entry is highlighted on the display.
2. Enter the first letter of the name to search alphabetically then scroll ▲ or ▼ to the exact entry. Press Options.
3. Scroll ▼ to Ringtone and press Select.
4. Scroll ▲ or ▼ to the ringtone you want and press Select. The ringtone is saved.
5. Press  to return to standby mode.

4.11 To delete an entry

1. In standby mode, press ▼. The first entry is highlighted on the display.
2. Enter the first letter of the name to search alphabetically then scroll ▲ or ▼ to the exact entry. Press Options.
3. Scroll ▼ to Delete Entry and press Select.
4. Display shows Delete <Name>?. Press Yes to confirm.
5. Press  to return to standby mode.

4.12 To store a fast call number

1. Press Names to enter the phonebook menu.
2. Search is highlighted. Press Select. The first entry is highlighted on the display.
3. Enter the first letter of the name to search alphabetically then scroll ▲ or ▼ to the exact entry, then press Options.
4. Scroll ▲ or ▼ to Fast Call, press Select to confirm.
5. Scroll ▲ or ▼ to Key X where the entry will be stored, press Select.
6. Assign is highlighted press Select to confirm.
7. Press  to return to standby.

NOTE

To dial fast call numbers, see page 16.

4.13 To clear a fast call number

1. Press Names to enter the phonebook menu.
2. Search is highlighted. Press Select. The first entry is highlighted on the display.
3. Enter the first letter of the name to search alphabetically then scroll ▲ or ▼ to the exact entry, then press Options.
4. Scroll ▲ or ▼ to Fast Call, press Select.
5. Scroll ▲ or ▼ to Key X where the entry is stored, press Select.
6. Scroll ▲ or ▼ to Clear Entry, press Select to confirm.
7. Press  to return to standby.

4.14 To access the phonebook during a call

1. During a call, press Names.
2. Press Options to select Add Entry, Show Details, Edit Entry or Delete Entry.

4.15 To copy the phonebook to another handset

1. Press Names to enter the phonebook menu.
2. Scroll ▼ to Copy Phonebk and press Select.
3. The display shows To Handset, press Select.
4. Scroll ▲ or ▼ to the number of the handset you want the phonebook to be copied to. Press Select.
5. Copy is completed when the message “X Entries Copied” appears on the display.
6. Press  to return to standby mode.

NOTE

If an entry with the same number is already stored in the receiving handset, it will not be copied.

4.16 To check memory status

You can check how much phonebook memory you have on your phone.

1. Press Names to enter the phonebook menu.
2. Scroll ▼ to Memory Status and press Select. The display shows the number of used and free phonebook entries.
3. Press  to return to standby mode.

4.17 To delete all entries

1. Press Names to enter the phonebook menu.
2. Scroll ▼ to Del. Phonebook and press Select.
3. Display shows Delete All Entries ?. Press Yes.
4. Press  to return to standby mode.

5. Calls Lists

If you have subscribed to Call Display service, and provided the identity of the caller is not withheld, the number of the caller will be displayed together with the date and time of the call (if provided by the network).

NOTES

If the caller's number is stored in your phonebook along with a name, the name will also be displayed.

If the number is unavailable, Unavailable will be displayed.

If the caller has withheld their number, Withheld will be displayed.

If the call is from an international number, International will be displayed.

If the call is from the operator, Operator will be displayed.

If the call is from a payphone, Payphone will be displayed.

If the call is from a ringback request, Ringback will be displayed.

Information about incoming calls is dependent on the country and network operator. Some operators may charge a subscription for their Call Display service.

The Calls Lists contains details of missed and received call. Details include the date and time of the call. Entries are displayed in chronological order with the most recent call at the top of the list.

When the list is full, and a new call is received, the oldest entry will be deleted automatically.

The received and missed Calls Lists holds details of up to 50 calls.

5.1 New calls alert

When you have new missed calls (incoming calls that you haven't answered), the display shows You have X new calls.

1. Press View to see details of the call.
2. If you press Back, the screen returns to standby mode and the  icon is displayed.

5.2 To view details of the call

1. Press Menu, scroll ▼ to Calls Lists and press Select. Or press  to enter the Calls Lists.
2. Scroll ▲ or ▼ to highlight the calls list (Missed Calls, Received Calls, Dialed Calls, Delete Calls) you want.
3. Press Select to confirm. The most recent number or name if stored in the phonebook is displayed.
4. Scroll ▲ or ▼ to the entry you want and press Options.

5. Display shows Show Details. Press Select.
The number (or name if stored in the phonebook), date and time of the call are displayed.
6. Press Back to return to the previous menu level or  to return to standby mode.

5.3 To save a number from the Calls Lists to the phonebook

1. Press  to enter the Calls Lists.
2. Scroll ▲ or ▼ to highlight the calls list (Missed Calls, Received Calls, Dialed Calls, Delete Calls) you want.
3. Press Select to confirm. The most recent number or name if stored in the phonebook is displayed.
4. Scroll ▲ or ▼ to the entry you want and press Options.
5. Scroll ▼ to Save Number and press Select.
6. Enter a name and press OK.
7. Display shows the number of the call. Edit the number if necessary and press Save. Press Clear to delete a character, or press and hold Clear to delete all characters.
8. Scroll ▲ or ▼ to the ringtone you want and press Select. The entry is stored.
9. To Handset is displayed and the handset will automatically give you the option to transfer the number to another handset.
10. Press Yes and if there are two or more handsets registered to the base the number will automatically transfer to the other handsets one by one. Once the entry is copied the transferring handset will display Copied Handset: and the handset numbers the entry was copied to.
11. Press  to return to standby mode.

5.4 To delete a Calls Lists entry

1. Press  to enter the Calls Lists.
2. Scroll ▲ or ▼ to highlight the calls list (Missed Calls, Received Calls, Dialed Calls, Delete Calls) you want.
3. Press Select to confirm. The most recent number or name if stored in the phonebook is displayed.
4. Scroll ▲ or ▼ to the entry you want and press Options.
5. Scroll ▼ to Delete Call and press Select. The call is deleted.
6. Press  to return to standby mode.

5.5 To delete entire Calls Lists

1. Press  to enter the Calls Lists.
2. Scroll ▼ to Delete Calls and press Select.

3. Scroll ▲ or ▼ to highlight the calls list (Missed Calls, Received Calls, Dialed Calls or All Calls) you want.
4. Display shows Delete All Calls ?. Press Yes to confirm.
5. Press  to return to standby mode.

5.6 To redial the last number

The phone lets you redial any of the last 20 numbers called. Numbers can be up to 32 digits long.

1. Press . The last number dialed is highlighted.
If the number is stored in the Phonebook, the name is displayed as well.
2. Press  to dial.

5.7 To view and dial a number in the redial list

1. Press . The last number dialed is highlighted.
2. Scroll ▲ or ▼ to the entry you want.
3. Press  to dial the number or press Back to return to standby.

5.8 To copy a redial number to the phonebook

1. Press . The last number dialed is highlighted.
2. Scroll ▲ or ▼ to the entry you want and press Options.
3. Scroll ▼ to Save Number and press Select.
4. Enter a name and press OK.
5. Display shows the number of the call. Edit the number if necessary and press Save.
6. Scroll ▲ or ▼ to the ringtone you want and press Select. The entry is stored.
7. To Handset is displayed and the handset will automatically give you the option to transfer the number to another handset.
8. Press Yes and if there are two or more handsets registered to the base the number will automatically transfer to the other handsets one by one. When the entry is being copied the transferring handset will display Copied Handset: and the handset numbers the entry was copied to.
9. Press  to return to standby mode.

5.9 To delete a redial list entry

1. Press . The last number dialed is highlighted.
2. Scroll ▲ or ▼ to the entry you want and press Options.
3. Scroll ▼ to Delete Call and press Select. The call is deleted.
4. Press  to return to standby mode.

6. Agenda

6.1 To add a new event

Use the phone to remind you of details of up to five events such as birthdays, anniversaries or appointments.

Up to 24 characters can be entered as the subject.

1. Press **Menu**, scroll ▼ to **Agenda** and press **Select**.
2. If no previous event is stored, **Add Event** is highlighted. Press **Select**.
Or
If events are already stored, they are listed. Press **Options**. **Add Event** is highlighted. Press **Select**.
3. Enter the subject and press **Save**.
4. Enter the date (DD/MM) and time (HH:MM) and press **Save**.
5. If the current time format setting is 12 hour, select **am** or **pm**.
Scroll ▲ or ▼ to **Silent** or **Alarm** then press **Select**.
If you press **Alarm**:
 - Scroll ▲ or ▼ to **Once** or **Annually** then press **Select**.
 - If **Once** is selected, scroll ▲ or ▼ to select when you want to receive the reminder
At event time or **30 min before**. Press **Select** to save.
 - If **Annually** is selected, then the alarm will sound at the event's time.
6. Press  to return to standby mode.

NOTES

If you select a silent reminder, the event subject is displayed on screen but no alarm will sound.

*When the event memory is full, the display shows **Memory Full**. You must delete an event before you can add a new one.*

6.2 To switch off reminder ring

When the event is due, the event subject is displayed. If the reminder is not set to **Silent**, the alarm will ring and the  icon is displayed.

1. Press **View** to stop the alarm and see the details of the event.
Or
Press **Back** to stop the alarm and return to standby mode.

NOTE

If no button is pressed, the alarm stops after one minute.

6.3 To show event details

1. Press **Menu**, scroll ▼ to **Agenda** and press **Select**.

2. Stored events are displayed. The first event is highlighted on the display. If required, scroll ▼ to the event you want and press Options.
3. Scroll ▼ to Show Details and press Select. The description, date and time of the agenda are displayed.
4. Press Back to return to the previous menu level or  to return to standby mode.

6.4 To edit an event

1. Press Menu, scroll ▼ to Agenda and press Select.
2. Stored events are displayed. The first event is highlighted on the display. If required, scroll ▼ to the event you want and press Options.
3. Scroll ▼ to Edit Event and press Select.
4. Edit the subject and press Save.
Press Clear to delete a character, or press and hold Clear to delete all characters.
5. Edit the date (DD/MM) and time (HH:MM) and press Save.
If the current time format setting is 12 hour, select am or pm.
6. Scroll ▲ or ▼ to Silent or Alarm then press Select.
If you press Alarm:
Scroll ▲ or ▼ to Once or Annually then press Select.
 - If Once is selected, scroll ▲ or ▼ to select when you want to receive the reminder
At event time or 30 min before. Press Select to save.
 - If Annually is selected, then the alarm will sound at the event's time.
7. Press  to return to standby mode.

6.5 To delete an event

1. Press Menu, scroll ▼ to Agenda and press Select.
2. Stored events are displayed. The first event is highlighted on the display. If required, scroll ▼ to the event you want and press Options.
3. Scroll ▼ to Delete Event and press Select.
4. Display shows Delete Event ?. Press Yes to confirm or No to cancel.
5. Press  to return to standby mode.

6.6 To delete all events

1. Press Menu, scroll ▼ to Agenda and press Select.
2. Stored events are displayed. The first event is highlighted on the display. Press Options.
3. Scroll ▼ to Del. All Events and press Select.
4. Display shows Delete All Events ?. Press Yes to confirm or No to cancel.
5. Press  to return to standby mode.

7. Clock & Alarm

If you have subscribed to your network's Caller Display service, the date and time is set automatically for all handsets when you receive your first call.

If you are not subscribed to Caller Display service, you can set the date and time manually.

7.1 To set date and time manually

1. Press **Menu**, scroll ▼ to **Clock & Alarm** and press **Select**.
2. **Date & Time** is highlighted. Press **Select**.
3. Enter the date using the format DD/MM/YY e.g. 04/08/13 for 4 August 2013.
4. Enter the time (HH:MM) and press **Save**.
If the current time format setting is 12 hour, select am or pm.
5. Press  to return to standby mode.

NOTE

The year will need to be set manually.

7.2 To set alarm

When the alarm is set, the display shows  icon.

Each handset can have a different alarm setting.

1. Press **Menu**, scroll ▼ to **Clock & Alarm** and press **Select**.
2. Scroll ▼ to **Alarm** and press **Select**.
3. Scroll ▲ or ▼ to **Off** or **On** and press **Select**.
If Alarm is set to **On**:
Scroll ▲ or ▼ to **Once**, **Mon - Fri** or **On Daily** then press **Select**.
Enter the time (HH:MM) and press **Save**.
If the current time format setting is 12 hour, select am or pm.
4. Press  to return to standby mode.

NOTES

*If the alarm is set to **Once**,  will disappear from the screen after the alarm has sounded once.*

*If the alarm is set to **On Daily** or **Mon - Fri**,  will remain on the screen after the alarm has sounded. When the alarm goes off, press any key to stop the ring.*

7.3 To set time format

1. Press **Menu**, scroll ▼ to **Clock & Alarm** and press **Select**.
2. Scroll ▼ to **Time Format** and press **Select**.
3. Scroll ▲ or ▼ to **12 Hour** or **24 Hour** and press **Select**.
4. Press  to return to standby mode.

8. Handset settings

8.1 To set the handset ringtone

You can set different ringtones for external calls and internal calls.

Select from 20 handset ringtones.

You will hear a sample ring as you scroll to each ringtone.

1. Press Menu, scroll ▼ to Settings and press Select.
2. Set Handset is highlighted. Press Select.
3. Ringtone is highlighted. Press Select.
4. Scroll ▲ or ▼ to External Call or Internal Call and press Select.
5. Scroll ▲ or ▼ to the ringtone that you want and press Select.
6. Press  to return to standby mode.

8.2 To set the handset ringer volume

The handset has 5 ringer volume settings plus Off.

If the volume is set to Off,  icon is displayed.

1. Press Menu, scroll ▼ to Settings and press Select.
2. Set Handset is highlighted. Press Select.
3. Scroll ▼ to Ringer Volume and press Select.
4. Scroll ▲ or ▼ to adjust the ringer volume level and press Select.
5. Press  to return to standby mode.

NOTES

When the phone is ringing, you may press Silence to silent the ringer for that call.

When the handset is in standby mode press and hold  to turn the ringer off, press and hold  again to turn it on.

8.3 To set the receiver volume

This sets the standard volume level for the handset earpiece or hands-free. There are 8 levels to choose from.

1. Press Menu, scroll ▼ to Settings and press Select.
2. Set Handset is highlighted. Press Select.
3. Scroll ▼ to Receiver Vol. and press Select.
4. Scroll ▲ or ▼ to adjust the receiver volume level and press Select.
5. Press  to return to standby mode.

8.4 To change the handset name

If you are using more than one handset with the base, you can give each handset a personalised name to easily distinguish between the handsets.

A name can be up to 10 characters long.

1. Press **Menu**, scroll ▼ to **Settings** and press **Select**.
2. **Set Handset** is highlighted. Press **Select**.
3. Scroll ▼ to **Handset Name** and press **Select**.
4. Enter the name and press **Save**.
Press **Clear** to delete a character, or press and hold **Clear** to delete all characters.
5. Press  to return to standby mode.

8.5 To change the display language

The available languages include:

English, Français, Deutsch, Italiano, Español, Nederlands, Türkçe, Ελληνικά and Português.

1. Press **Menu**, scroll ▼ to **Settings** and press **Select**.
2. **Set Handset** is highlighted. Press **Select**.
3. Scroll ▼ to **Language** and press **Select**.
4. Scroll ▲ or ▼ to the language you want and press **Select**.
5. Press  to return to standby mode.

8.6 To change the wallpaper

1. Press **Menu**, scroll ▼ to **Settings** and press **Select**.
2. **Set Handset** is highlighted. Press **Select**.
3. Scroll ▼ to **Wallpaper** and press **Select**.
4. Scroll ▲ or ▼ to the wallpaper you want and press **View**, then press **Use** to select.
5. Press  to return to standby mode.

8.7 To set the screensaver

When the screensaver is set to Clock, an analogue clock is displayed.

The screensaver comes on when the screen backlight switches off in standby mode. To change the backlight timeout setting, see “To set light timeout” in the next section.

1. Press Menu, scroll ▼ to Settings and press Select.
2. Set Handset is highlighted. Press Select.
3. Scroll ▼ to Screensaver and press Select.
4. Scroll ▲ or ▼ to Clock or Off then press Select.
5. Press  to return to standby mode.

8.8 To set light timeout

Set the duration of the backlight after the handset returns to standby screen.

1. Press Menu, scroll ▼ to Settings and press Select.
2. Set Handset is highlighted. Press Select.
3. Scroll ▼ to Light Timeout and press Select.
4. Scroll ▲ or ▼ to set the timeout period you want and press Select.
5. Press  to return to standby mode.

8.9 To switch auto talk on / off

With Auto Talk switched on, you can answer a call just by lifting the handset off the base or charger. If switched off, you will have to press  to answer a call.

1. Press Menu, scroll ▼ to Settings and press Select.
2. Set Handset is highlighted. Press Select.
3. Scroll ▼ to Auto Talk and press Select.
4. Scroll ▲ or ▼ to Off or On then press Select.
5. Press  to return to standby mode.

8.10 To switch key beep on / off

When you press a button on the handset, you will hear a beep. You can switch it on or off.

1. Press Menu, scroll ▼ to Settings and press Select.
2. Set Handset is highlighted. Press Select.
3. Scroll ▼ to Key Beep and press Select.
4. Scroll ▲ or ▼ to Off or On then press Select.
5. Press  to return to standby mode.

8.11 To set PBX Access Code

If the phone is connected to a switchboard, you may need to enter an PBX Access Code in the dialling sequence to be able to connect to the outside line.

The PBX Access Code will be displayed at the beginning of a number on the screen. The code can be up to 4 digits long.

The PBX Access Code will not be used when you dial the number manually (such as when you are not dialling from the phonebook). This allows you to make calls to other switchboard extensions.

1. Press **Menu**, scroll ▼ to **Settings** and press **Select**.
2. **Set Handset** is highlighted. Press **Select**.
3. Scroll ▼ to **PBX Access Code** and press **Select**.
4. Scroll ▲ or ▼ to **Off, On or Set Code** then press **Select**.
If you select **Set Code**, enter the switchboard access code e.g. 9 then press **Save**.
5. Press  to return to standby mode.

9. Base settings

9.1 To set the base ringtone

Select from 5 base ringtones.

You will hear a sample ring as you scroll to each ringtone.

1. Press Menu, scroll ▼ to Settings and press Select.
2. Scroll ▼ to Set Base and press Select.
3. Ringtone is highlighted. Press Select.
4. Scroll ▲ or ▼ to the ringtone that you want and press Select.
5. Press  to return to standby mode.

9.2 To set the base ringer volume

The base has 5 ring volume settings plus Off.

1. Press Menu, scroll ▼ to Settings and press Select.
2. Scroll ▼ to Set Base and press Select.
3. Scroll ▼ to Ringer Volume and press Select.
4. Scroll ▲ or ▼ to display the volume level that you want and press Select.
5. Press  to return to standby mode.

9.3 To set ring priority

When you have more than one handset registered to your base, you can set one handset to ring before the other handsets. This allows one handset user to answer all incoming calls first, for example, the receptionist.

Choose All Handsets if you want all handsets to ring at the same time or Select Handset to nominate a handset to ring two times before the other handsets ring.

1. Press Menu, scroll ▼ to Settings and press Select.
2. Scroll ▼ to Set Base and press Select.
3. Scroll ▼ to Ring Priority and press Select.
4. Scroll ▲ or ▼ to All Handsets or Select Handset then press Select.
If you choose Select Handset, all available handsets are displayed.
 - Scroll ▲ or ▼ to the handset you want then press Select.
 - Scroll ▲ or ▼ to the number of rings that you want to set: 2, 4 or 6 and press Select.
5. Press  to return to standby mode.

9.4 To change the recall mode

Recall is useful to access certain network services and PABX/switchboard services.

The default recall mode preset in the phone is suitable for your country network and therefore you should not need to change it.

NOTE

The use of the phone cannot be guaranteed on all PABX.

1. Press Menu, scroll ▼ to Settings and press Select.
2. Scroll ▼ to Set Base and press Select.
3. Scroll ▼ to Recall Mode and press Select.
4. Scroll ▲ or ▼ to Recall 1 or Recall 2 then press Select to confirm.
5. Press  to return to standby mode.

9.5 To change the System PIN

The System PIN is required when changing certain settings and for registration / de-registration. The default setting is 0000. You can change this to your own preferred number (up to 8 digits).

When you enter a PIN, the digits are shown as *****.

1. Press Menu, scroll ▼ to Settings and press Select.
2. Scroll ▼ to Set Base and press Select.
3. Scroll ▼ to System PIN and press Select.
4. Enter the old PIN (Default setting = 0000) and press OK.
5. Enter the new PIN and press OK.
6. Re-enter the new PIN and press OK.
7. Press  to return to standby mode.

NOTE

It is advisable to make a note of your new PIN code and keep it somewhere safe.

9.6 To reset the phone

You can restore the phone to its default (original) settings.

Resetting the phone will not affect the phonebook or Calls Lists, and all handsets registered to the base will be retained. Only the handset and base settings will be reset.

1. Press **Menu**, scroll **▼** to **Settings** and press **Select**.
2. Scroll **▼** to **Set Base** and press **Select**.
3. Scroll **▼** to **Master Reset** and press **Select**.
4. Select **Yes** to confirm or **No** to cancel.
5. Enter the System PIN (Default setting = 0000) then press **OK**. The display will show **Reset complete** and the unit will restart automatically.

9.7 To switch ECO on / off

Your O2 offers an ECO function which reduces the transmitted power and energy consumption when switched on. This feature is set to **Off** by default.

1. Press **Menu**, scroll **▼** to **Settings** and press **Select**.
2. Scroll **▼** to **Set Base** and press **Select**.
3. Scroll **▼** to **ECO Mode** and press **Select**.
4. **ECO** is highlighted, press **Select**.
5. Scroll **▲** or **▼** to **Off** or **On** and press **Select** to confirm.
6. Press  to return to standby.

9.8 To switch ECO PLUS on / off

When **ECO PLUS** is activated and the unit has been idle for 1 minute the transmitted power between the handset and the base will stop, an incoming call or pressing any key will activate the unit and it will revert back to the normal mode.

This feature is set to **Off** by default.

1. Press **Menu**, scroll **▼** to **Settings** and press **Select**.
2. Scroll **▼** to **Set Base** and press **Select**.
3. Scroll **▼** to **ECO Mode** and press **Select**.
4. Press **▲** or **▼** to **ECO PLUS**, press **Select**.
5. Press **▲** or **▼** to highlight **Off** or **On** then press **Select**.
6. Press  to return to standby.

NOTES

When **ECO** is set to on, the  icon is replaced with  icon. The base transmission power will be reduced.

When **ECO PLUS** is set to **On**  will be displayed.

9.9 Default settings

Auto pick up	Off
Ringer melody	(EXT) Melody 3
Ringer melody	(INT) Melody 1
Ringer volume	3
Earpiece volume	2
Phonebook	Unchanged
Call list	Unchanged
Redial list	Unchanged
Master PIN	0000
Answering machine	On
Answer mode	Answer & record
Outgoing message	Pre-defined
Ring delay	6
Remote access	On

10. Registration

Up to 11 handsets can be registered to one base station. Additional handsets must be registered to the base before you can use them.

- The instructions described below apply specifically to the handset of this model. If you wish to register another manufacturer's handset, the instructions may vary. In this case, please refer to the instruction manual of the additional handset.
- The System PIN is required to register or de-register handsets. The default PIN is 0000.

10.1 To register a handset

On the base:

1. Press and hold  until the base emits a double beep. The base will remain in registration mode for 90 seconds.

On the handset:

1. If the handset is new, the display shows **Please register**. Press **Reg**.
2. Display shows **Press and Hold Base Find Key**.
3. Press **OK**, display shows **Searching Base X**. If the system PIN is 0000 (default) the handset will automatically register, if the PIN has been changed enter the system PIN and press **OK**.
4. When registration is complete, the display shows **Handset Registered**.
Or
If the handset has already been registered to another base, the standby display is shown. Press **Menu**, scroll **▼** to **Registration** and press **Select**.
5. **Register HS** is highlighted. Press **Select**.
6. Bases are displayed. If necessary, scroll **▲** or **▼** to a new base you wish to register the O2 handset to and press **Select**.
7. If you are replacing a base that is already indicating **In Use**, when you press **Select** the display shows **Replace Base X?** Press **Yes**.
8. The display shows **Searching Base X**. If the system PIN is 0000 (default) the handset will automatically register, if the PIN has been changed, enter the system PIN and press **OK**.

NOTE

If registration is not successful the first time, please repeat the process again in case the base registration period ran out of time.

If there are already 11 handsets registered to the base, registration will fail. You must de-register a handset before you can register a new one.

10.2 To select a base

You can register the handset with up to 4 bases. Once registered, you can switch between bases, for example, bases at home and at work.

1. Press Menu, scroll ▼ to Registration and press Select.
2. Scroll ▼ to Select Base and press Select.
3. All the base numbers are displayed.
(In use) is shown beside the base number where the handset was previously registered to. Scroll ▲ or ▼ to the base you want and press Select.
4. The display shows Searching Base X.... When registration is complete, the handset returns to standby mode.

10.3 To de-register a handset

Use one handset to de-register another. You cannot de-register the handset that you are using.

1. Press Menu, scroll ▼ to Registration and press Select.
2. Scroll ▼ to De-register and press Select.
3. Enter the System PIN and press OK. (default setting = 0000)
4. Scroll ▲ or ▼ to the handset you want to de-register and press Select.
5. Press Yes to confirm or No to cancel.
6. Press  to return to standby mode.

11. Answering machine

The O2 answering machine records unanswered calls on the base when it is activated. It can store up to 59 messages within the maximum recording time of up to 25 minutes. Each message can be up to 3 minutes long. Your personalised outgoing messages (OGM) can be up to 3 minutes long.

You can operate your answering machine from:

- the handset.
- remotely, from another phone, see page 45.

NOTE

You will need to set the date and time (if you have not already) so that you will know when each message was received, see page 30.

11.1 Switch between answering machine on / off

When switched on the handset display shows  in standby mode.

1. Press Menu, the display shows Answer Machine, press Select.
2. Scroll ▼ to Answer On/Off and press Select.
3. Scroll ▲ or ▼ to Off or On then press Select.
4. Press  to return to standby.

11.2 To change answer delay

Answer delay sets the number of times the O2 will ring before the answering machine picks up your call and starts playing the OGM.

You can change this setting to between 2-9 rings or Time Saver. The default setting is 6 rings.

1. Press Menu, the display shows Answer Machine, press Select.
2. Scroll ▼ to Answer Settings and press Select.
3. Scroll ▲ or ▼ to Answer Delay and press Select.
4. Scroll ▲ or ▼ to the setting you want and press Select.
5. Press  to return to standby.

NOTE

If Time Saver is set, the answering machine will answer after 2 rings during remote access if you have new messages. If you do not have any new messages, it will answer after 6 rings. This means you can hang up after 3 rings knowing you have no new messages, saving you time and the cost of the call.

11.3 To switch message alert tone on / off

When you have new messages, with the audible message alert switched on, you will hear an audible alert once at the handset and the answering machine base will beep every 10 seconds. The default setting is Off.

1. Press **Menu**, the display shows **Answer Machine**, press **Select**.
2. Scroll **▼** to **Answer Settings** and press **Select**.
3. Scroll **▲** or **▼** to **Message Alert** and press **Select**.
4. Scroll **▲** or **▼** to **Off** or **On** then press **Select**.
5. Press  to return to standby.

11.4 New messages alert

When you have new messages, the display shows **You have X new messages**.

If you press **Back**, the screen returns to standby mode and the  icon is displayed.

11.5 Outgoing messages

The OGM is the message a caller first hears when the answering machine picks up their call. The O2 comes with 2 pre-recorded OGMs, or you can record your own.

11.6 To record a personalised OGM

You can record personalised OGMs up to 3 minutes long for your callers.

The **Answer & Record** mode allows your caller to leave a message after the announcement, while the **Answer Only** mode only allows your caller to hear the announcement. You will be prompted to select the mode before the recording.

1. Press **Menu**, the display shows **Answer Machine**, press **Select**.
2. Scroll **▼** to **Outgoing Msg.** and press **Select**.
3. **Record** is highlighted, press **Select**.
4. Scroll **▲** or **▼** to **Ans. & Rec.** or **Answer Only** then press **Select**.
5. The display shows **Please speak after the tone**.
6. After the tone, speak your message clearly into the handset then press **Save** to end recording.
7. Your OGM is played back. If you want to delete it, press **Delete** during playback. If you press **Save** or wait for the message to play back, it will be saved.
8. Press  to return to standby.

11.7 To play or delete your personalised OGM

Deleting a personalised OGM automatically reinstates the pre-recorded one.

You cannot delete a pre-recorded message.

1. Press **Menu**, the display shows **Answer Machine**, press **Select**.
2. Scroll **▼** to **Outgoing Msg.** and press **Select**.
3. Scroll **▼** to **Play** and press **Select**.
4. Scroll **▲** or **▼** to **Ans. & Rec.** or **Answer Only** then press **Select**.
5. Scroll **▼** to **Personal OGM** and press **Select**.

6. The message is played. Press OK to stop playback or press Delete to delete the message.
7. Press  to return to standby.

11.8 To set the answer mode OGM

You can select a pre-recorded or personalised OGM as the announcement to your callers.

1. Press Menu, the display shows Answer Machine, press Select.
2. Scroll ▼ to Answer Settings and press Select.
3. Scroll ▼ to Answer Mode and press Select.
4. Scroll ▲ or ▼ to Ans. & Rec. or Answer Only then press Select.
5. If there is a personalised OGM saved, scroll ▲ or ▼ to Default OGM or Personal OGM then press Select to confirm.
Or
If there is no personalised OGM saved, the pre-recorded OGM will be selected automatically.
6. Press  to return to standby.

11.9 To record a memo

You can record a memo which is stored on your answering machine and played back like a normal message.

1. Press Menu, the display shows Answer Machine, press Select.
2. Scroll ▼ to Record Memo and press Select.
3. The display shows Please speak after the tone.
4. After you hear the tone, speak your memo then press Save to end recording.
5. Your memo is played back. If you want to delete it, press Delete during playback. If you press Save or wait for the message to play back, it will be saved.
6. Press  to return to standby.

NOTE

When a memo is played back, Memo is displayed on the handset.

11.10 Call screening

When the answering machine is on and takes a call, you can screen the message via the handset

1. When the handset rings, wait for the answering machine to take the call. When the caller begins leaving a message, the display shows Recording. Press Screen to hear the caller.
2. To interrupt and speak to the caller directly, press .
3. Press  to return to standby.

NOTE

While screening, you can adjust the volume by pressing ▲ or ▼.

11.11 Message playback

Each message is played back with day and time of the call announced. The caller's number is displayed (if stored in the phonebook the name will be displayed).

1. Press Menu, the display shows Answer Machine, press Select.
2. Play is highlighted. Press Select to play by message or scroll ▼ to Play All then press Select to play all messages.
3. During playback, press Options. The options Pause, Repeat Message, Skip Forward, Skip Backward and Delete are displayed.
4. Scroll ▲ or ▼ to highlight the option and press Select to confirm.
5. At the end of playback, press Back to return to the previous menu level.

NOTES

If you pause a message, press Resum. to resume playback.

Alternatively, you may use the following keys on your handset during playback:

1 To pause

2 To resume

3 To repeat message

4 To skip forward

5 To delete current message

6 To skip backwards

11.12 Delete all old messages

Answering machine messages that are not deleted are automatically saved.

New messages or existing messages that have not been played back cannot be deleted.

1. Press Menu, the display shows Answer Machine, press Select.
2. Scroll ▼ to Del. Messages and press Select.
3. Display shows Delete All Old Messages ?. Press Yes to confirm or No to cancel.
4. Press  to return to standby.

NOTES

If the memory is within 10 seconds of becoming full while a caller is leaving a message, they will hear, "Please complete your message within 10 seconds". If they are still talking when the memory becomes full the caller hears, "Thank you for calling", and the machine will hang up.

When the memory is full, the OGM will automatically be set to Answer Only. You must delete old messages before the O2 can record new messages.

11.13 Remote access

Remote access allows you to operate your answering machine and listen to your messages by calling the O2 from another phone.

The default setting is On.

1. Call your O2. When you hear the OGM, press *.
2. Enter your 4 digit remote access PIN (default setting = 0000). You will hear a confirmation beep.

NOTE

You should change this code for additional security, see "To change the remote access PIN".

3. Use the following keys to operate your answering machine:

DTMF code	Operations	
	with Voice Prompts	with Outgoing Messages
*	To enter remote access mode	To enter remote access mode
1	To hear main menu	No action
2	To play all messages	To play all messages
3	To play new messages	To play new messages
4	To skip back during messages	To skip back during messages
5	To delete during messages	To delete during messages
6	To skip forward during messages	To skip forward during messages
7	To set answer mode	No action
8	To record a new OGM	No action
9	To switch answer machine off	To switch answer machine off
0	To switch answer machine on	To switch answer machine on

NOTES

If you have any new messages they will be played after you have entered your remote access PIN code.

If you enter an incorrect PIN code you will hear "Incorrect security code or two beeps (error beeps). Please enter your security code". You can try entering the code again. If it is still incorrect you will hear the voice prompt or two beeps (error beeps) and the O2 will hang up.

11.14 To switch remote access on / off

1. Press Menu, the display shows Answer Machine, press Select.
2. Scroll ▼ to Answer Settings and press Select.
3. Scroll ▲ or ▼ to Remote Access and press Select.
4. Scroll ▲ or ▼ to Off or On then press Select.
5. Press  to return to standby.

11.15 To change the remote access PIN

The default remote access PIN is 0000.

1. Press Menu, the display shows Answer Machine, press Select.
2. Scroll ▼ to Answer Settings and press Select.
3. Scroll ▲ or ▼ to Remote Access and press Select.
4. Scroll ▲ or ▼ to Set Remote PIN and press Select.
5. Enter the old 4-digit PIN and press Save (default setting = 0000).
6. Enter the new 4-digit PIN and press Save.
7. Re-enter the new PIN and press Save.
8. Press  to return to standby.

NOTES

This PIN is different from the System PIN used when resetting the unit or when registering / de-registering handset.

It is advisable to make a note of your new PIN code and keep it somewhere safe.

12. Help

The icon is not scrolling during charge

- Bad battery contact – move the handset slightly.
- Battery is full – no need to charge.

No dialling tone

- No power – check the connections. Reset the phone: unplug and plug back in the mains.
- Batteries are empty – charge the batteries for at least 24 hours.
- You are too far from the base – move closer to the base.
- Wrong line cable – use the line cable provided.
- Line adaptor (when needed) is not connected to the line cord – connect the line adaptor (when needed) to the line cord.

Poor audio quality

- The base is too close to electrical appliances, reinforced concrete walls or metal door frames – move the base at least one metre away from any electrical appliances.

The icon is blinking

- Handset is not registered to the base – register the handset to the base.
- You are too far from the base – move closer to the base.

No ring tone

- The ring tone is deactivated.
- Increase the volume.
- Caller ID service does not work
- Check your subscription with your network operator.

A phonebook entry cannot be stored

- The phonebook is full. Delete an entry to free memory.

No display

- Try recharging or replacing the batteries.
- Try disconnecting and connecting the base power supply.
- If LED is not lit up, then try disconnecting and connecting the base power supply.

Unable to register another handset

- Maximum number of 11 handsets has been reached.
- The display shows Searching.... You must deregister a handset in order to register a new one.

Noise interference on your radio or television

- Your base or charger may be too close. Move it as far away as possible.

Answering machine does not record messages

- Switch the answering machine on.
- The memory may be full. If so, you will need to delete some messages.
- Answer mode may have been set to Answer Only. Change Cannot access messages remotely
- Remote access may be switched off.
- Check that you are using the correct PIN code.

Cannot record outgoing message

- The memory may be full. If so, you will need to delete some messages.
- Answering machine stops recording
- The memory may be full. If so, you will need to delete some messages.
- The maximum message length is 3 minutes.

13. General information

IMPORTANT

This equipment is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.

This product is intended for connection to analogue public switched telephone networks and private switchboards in South Africa.

Important safety instructions

Follow these safety precautions when using your phone to reduce the risk of fire, electric shock, and injury to persons or property:

- Keep all slits and openings of the phone unblocked. Do not set the phone on a heating register or over a radiator. Ensure that proper ventilation is provided at the installation site.
- Do not allow anything to rest on the power cord. Place the power cord so that it will not be walked on.
- Never insert objects of any kind into the product vents as that may result in fire or electric shock.
- Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- Do not disassemble this product. If service or repair work is required, contact the customer service helpline found in this user's Guide.
- Do not overload wall outlets and extension cords.
- Avoid using during an electrical storm. Use a surge protector to protect the equipment.
- Do not use this phone to report a gas leak, especially if you are in the vicinity of the gas line.

CAUTION

To reduce the risk of fire, use only the supplied power adaptor.

Unplug this cordless phone immediately from an outlet if:

- The power cord or plug is damaged or frayed.
- Liquid has been spilled on the product.
- The product has been exposed to rain or water. Do not retrieve the handset or base until after you have unplugged the power and phone from the wall. Then retrieve the unit by the unplugged cords.
- The product has been dropped or the cabinet has been damaged.
- The product exhibits a distinct change in performance.

Installation Guidelines

- Read and understand all instructions and save them for future reference.
- Follow all warnings and instructions marked on the product.
- Do not install this product near a bath tub, sink, or shower.
- Operate this phone using only the power source that is indicated on the marking label. If you are unsure of the power supply to your home, consult with your dealer or local power company.
- Do not place this product on an unstable cart, stand, or table. This product may fall, causing serious damage to the product.
- Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work to restore the product to normal operation.
- Clean this product with a soft, damp cloth. Do not use chemicals or cleaning agents to clean this phone.
- Use only the power supply that came with this unit. Using other power supplies may damage the unit.
- Because this phone operates on electricity, you should have at least one phone in your home that could operate without electricity in the case the power in your home goes out.
- To avoid interference to nearby appliances, do not place the base of the phone on or near a TV, microwave oven, or VCR.

Battery Safety Instructions

- Do not burn, disassemble, mutilate, or puncture the battery. The battery contains toxic materials that could be released, resulting in injury.

CAUTION

There is a risk of explosion if you replace the battery with an incorrect battery type. Use only the battery pack that came with your phone or an authorized replacement recommended by the manufacturer.

- Keep battery packs out of the reach of children.
- Do not dispose of battery packs in fire, which could result in explosion.
- The rechargeable battery packs that power this product must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling center for proper disposal methods.

SAVE THESE INSTRUCTIONS

Cleaning

- Clean the handset and base (or charger) with a damp (not wet) cloth, or an anti-static wipe.
- Never use household polish as this will damage the product. Never use a dry cloth as this may cause a static shock.

Environmental

- Do not expose to direct sunlight.
- The handset may become warm when the batteries are being charged or during prolonged periods of use. This is normal. However, we recommend that to avoid damage you do not place the product on antique/veneered wood.
- Do not stand your product on carpets or other surfaces which generate fibres, or place it in locations preventing the free flow of air over its surfaces.
- Do not submerge your products base or charging unit in water and do not connect them in damp or humid conditions, such as bathrooms.
- Do not expose your product to fire, explosive or other hazardous conditions.
- There is a slight chance your phone could be damaged by an electrical storm. We recommend that you unplug the power and telephone line cord during an electrical storm.

Product disposal instructions

- European Union (EU) Waste of Electrical and Electronic Equipment (WEEE) directive
The European Union's WEEE directive requires that products sold into EU countries must have the crossed out trashbin label on the product (or the package in some cases). As defined by the WEEE directive, this crossed-out trashbin label means that customers and end-users in EU countries should not dispose of electronic and electrical equipment or accessories in household waste. Customers or end-users in EU countries should contact their local equipment supplier representative or service centre for information about the waste collection system in their country.
- The Waste of Electrical and Electronic Equipment (WEEE) Directive (2002/96/EC) has been put in place to recycle products using best available recovery and recycling techniques to minimize the impact on the environment, treat any hazardous substances and avoid the increasing landfill.

Product disposal instructions for residential users

When you have no further use for it, please remove any batteries and dispose of them and the product per your local authority's recycling processes. For more information please contact your local authority or the retailer where the product was purchased.

Product disposal instructions for business users

Business users should contact their suppliers and check the terms and conditions of the purchase contract and ensure that this product is not mixed with other commercial waste for disposal.

Consumer Products and Accessories Warranty

Thank you for purchasing this Motorola branded product manufactured under license by Suncorp Technologies Limited, 2/F, Shui On Centre, 6-8 Harbour Road, Hong Kong. ("SUNCORP")

What Does this Warranty Cover?

Subject to the exclusions contained below, SUNCORP warrants that this Motorola branded product (“Product”) or certified accessory (“Accessory”) sold for use with this product that it manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This Limited Warranty is your exclusive warranty and is not transferable.

Who is covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

What will SUNCORP do?

SUNCORP or its authorized distributor at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessories that does not conform to this limited warranty. We may use functionally equivalent reconditioned/ refurbished/ pre-owned or new Products, Accessories or parts.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OF IMPLIED. IN NO EVENT SHALL MOTOROLA OR SUNCORP BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.

Products Covered	Length of Coverage
Consumer Products	One (1) year from the date of the products original purchase by the first consumer purchaser of the product.
Consumer Accessories (battery, power supply(s) and line cords)	Ninety (90) days from the date of the accessories original purchase by the first consumer purchaser of the product.
Consumer Products and Accessories that are Repaired or Replaced	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola or SUNCORP, are excluded from coverage.

Use of Non-Motorola branded Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, SUNCORP or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.

How to Obtain Warranty Service or Other Information?

To obtain service or information, please call: 0860 224 357.

You will receive instructions on how to ship the Products or Accessories at your expense and risk, to a SUNCORP Authorized Repair Center.

To obtain service, you must include: (a) the Product or Accessory; (b) the original proof of purchase (receipt) which includes the date, place and seller of the Product; (c) if a warranty card was included in your box, a completed warranty card showing the serial number of the Product; (d) a written description of the problem; and, most importantly; (e) your address and telephone number.

Technical Information

How many telephones can I have?

All items of telephone equipment have a Ringer Equivalence Number (REN), which is used to calculate the number of items which may be connected to any one telephone line. Your O2 has a REN of 1. A total REN of 4 is allowed. If the total REN of 4 is exceeded, the telephones may not ring. With different telephone types there is no guarantee of ringing, even when the REN is less than 4.

Any additional handsets and chargers that you register have a REN of 0.

R&TTE

This product is intended for use within Europe for connection to the public telephone network and compatible switchboards.

This equipment complies with the essential requirements for the Radio Equipment and Telecommunications Terminal Equipment Directive 1999/5/EC including compliance with ICNIRP standard for electromagnetic energy exposure.

Connecting to a switchboard

This product is intended for use within South Africa for connection to the public telephone network.

Inserting a pause

With some switchboards, after dialling the access code you may have to wait for a moment while the switchboard picks up an outside line so you will need to enter a pause in the dialling sequence.

Press and hold  to insert a pause (P) before entering the telephone number.

You may also need to enter a pause when storing international numbers or charge card numbers.

Recall

You may need to use the recall function if you are connected to a switchboard/PABX (Private Automatic Branch Exchange), contact your PABX supplier for further information.

14. Wall mounting

IMPORTANT


Before you wall-mount your O2, check that you are not drilling into any hidden wiring or pipes.

Before you drill, make sure the power and telephone line cables will reach the sockets.


1. Use the following templates to mark the drilling locations.



- To wall-mount the base and charger respectively, drill two holes in the wall 4.9cm apart horizontally using an 8mm drill bit.

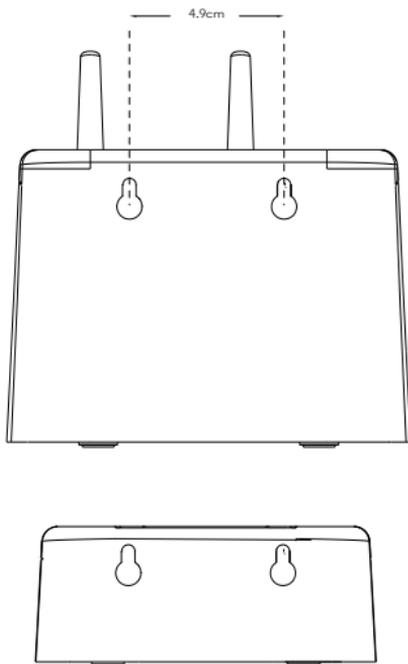

2. Insert the wall plugs if necessary, then insert the screws leaving about 5mm protruding from the wall on which to hang the phone.

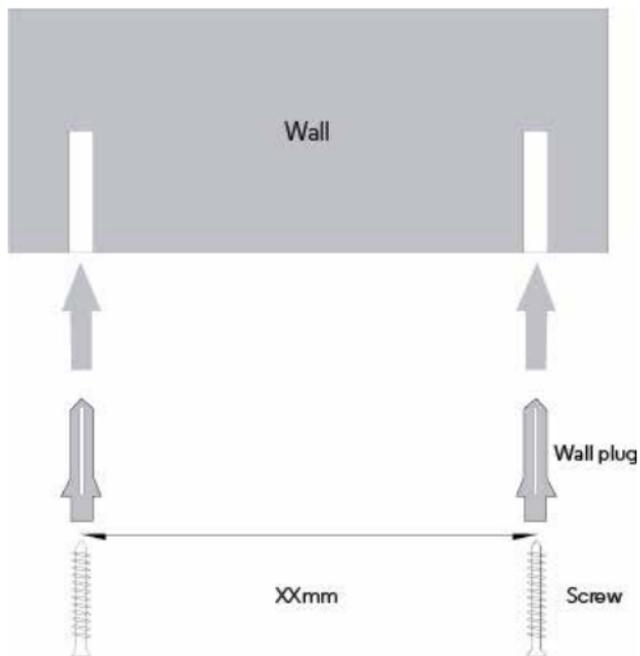

3. Slot the holes on the back of the base over the screw heads and gently pull the base/charger down to make sure it is securely in place.

<This page has been intentionally left blank>

<This page has been intentionally left blank>

Declaration of Conformity (DoC)

Suncorp declares that the following products:

Brandname: Motorola
Type: O211, O212, O213 and O214
Descriptions: DECT phone with telephone answering machine (O21x) and their multi-handset versions.

to which this declaration related is in conformity with the essential requirements of the following directives of the Council of the European Communities:

- R&TTE Directive (1999/5/EC)
- Ecodesign Directive (2009/125/EC)

The products are compliant with the following standards:

Safety: EN60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013
EMC: EN301489-1 v1.9.2 and EN301489-6 v1.3.1
RF Spectrum : EN301406 v2.1.1
Ecodesign : EC No 278/2009, 6 April 2009

For and on behalf of Suncorp Technologies Limited,

Signature:



Printed name & Position: CW Cheung – Chief Technical Officer

Date: November 24, 2014

Place: 2/F, Shui On Centre, 6-8 Harbour Road, Hong Kong

Manufactured, distributed or sold by Suncorp Technologies Ltd., official licensee for this product. MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners. © 2015 Motorola Mobility LLC. All rights reserved.

Version 3 (ZA)

